
SWITCHBACK[™]

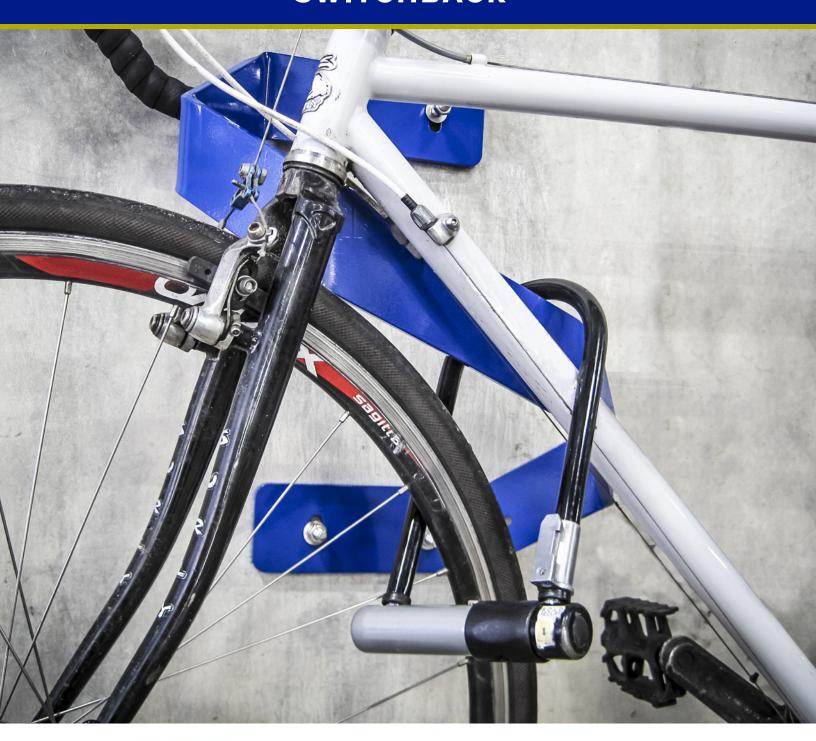



Ideal for Limited Space

One wall, one bike, no room? No problem! The Switchback™ Rack allows for horizontal bike parking along a wall when your space is limited. Ride up, lock your bike, and use the optional cable to secure both wheels if you like. An ideal rack for urban settings where space is at a premium.

Patent D767,452 S1



SWITCHBACKTM



- U-lock compatible
- Optional locking cable available for added security
- Wall mounted

FINISH OPTIONS

Galvanized




Powder Coat

White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange	Blue	Sky Blue	Hunter Green
	RAL 2004	RAL 5005	RAL 5015	RAL 6005
Light Green	Green	Sepia Brown	Bronze	Silver
RAL 6018	RAL 6016	RAL 8014		9007




SWITCHBACKTM

Submittal Sheet

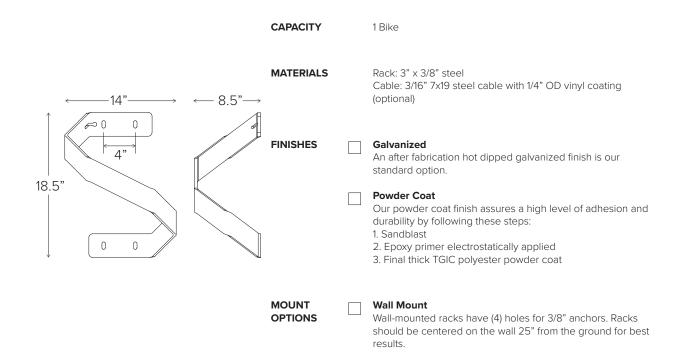



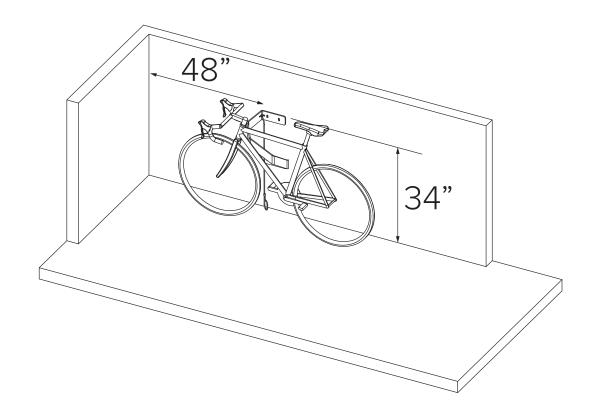



SWITCHBACK™

Installation Instructions — Wall Mount

TOOLS NEEDED


Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench or ratchet 9/16"
Level

RECOMMENDED BASE MATERIAL

Solid concrete is the best base material. Brick, block, and wood stud walls may be acceptable. Metal stud walls are not an acceptable material for installation. Before installing make sure nothing is behind the wall that could be damaged by drilling and that the base material is strong enough to support a fully loaded rack. Tell your Dero representative what kind of base material you are installing the Switchback™ into so the proper anchors can be shipped with the rack.

INSTALLATION


3/8" anchors are shipped with the rack. Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material. Drill the holes in accordance with the specifications shipped with the anchors. Make sure the holes are at least 3" away from any cracks in the base material. Racks should be mounted 25" from the ground at the center of the rack.

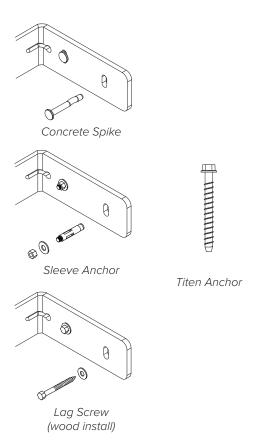




SWITCHBACKTM

Installation Instructions — Wall Mount

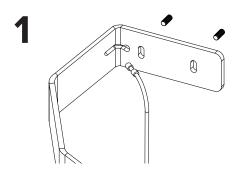

Before anchoring Switchback™ to wall, insert end of locking cable through larger end of the cable slot and slide cable forward.

2

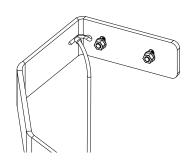

Anchor Switchback™ to wall following instructions on previous page.

