



Security Is So Square

The Downtown Rack uses thick, square-tube construction that can't be cut with a pipe cutter. The extended width of the Downtown Rack makes for easy bike parking by giving the bike full support and multiple locking points for a u-style bike lock.



YOUR LOGO HERE

Customize the Downtown Rack and brand your bike parking










FINISH OPTIONS Stainless

Galvanized



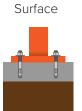

MOUNT OPTIONS In-Ground






Powder Coat

White	Black	Light Gray RAL 7042	Deep Red RAL 3003	Yellow RAL 1023
CNH Bright Yellow	Orange	Blue	Sky Blue	Hunter Green
	RAL 2004	RAL 5005	RAL 5015	RAL 6005
Light Green	Green	Sepia Brown	Bronze	Silver
RAL 6018	RAL 6016	RAL 8014		9007
Dark Purple	Flat Black	Wine Red	Beige	Iron Gray






Submittal Sheet

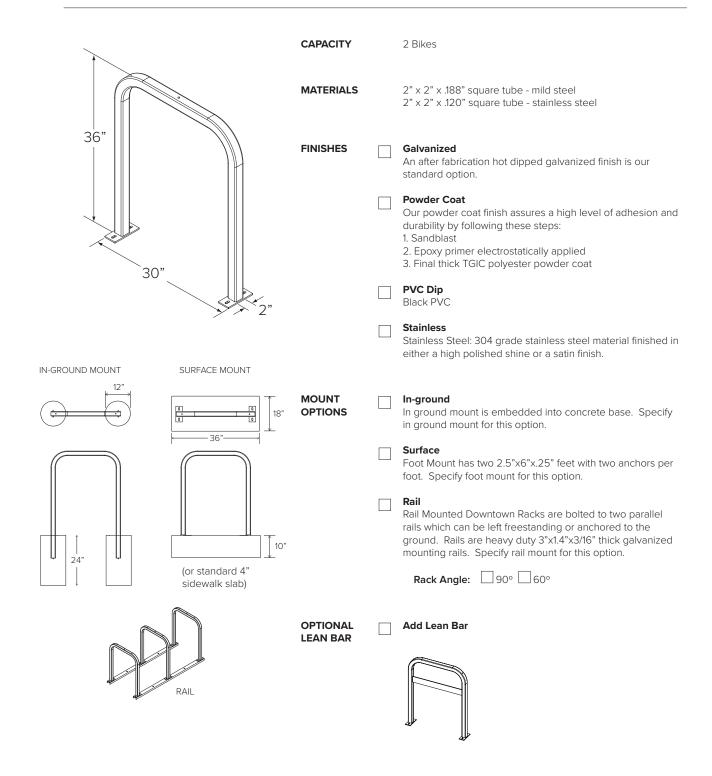



Setbacks

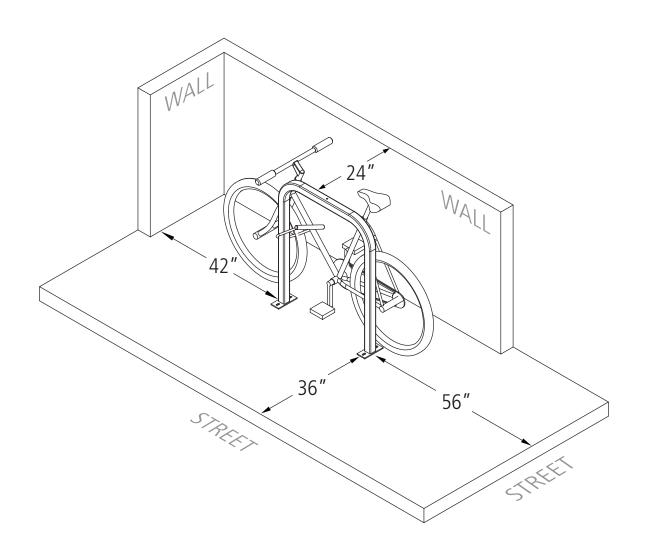



Installation Instructions —Surface Mount


TOOLS NEEDED

Tape Measure Marker or Pencil Masonry Drill Bit Drill (Hammer drill recommended) Hammer Wrench 9/16" Level

RECOMMENDED BASE MATERIAL

Solid concrete is the best base material for installation. To ensure the proper anchors are shipped with your rack, ask your Dero Rack representative which anchor is appropriate for your application. Be sure nothing is underneath the base material that could be damaged by drilling.

1

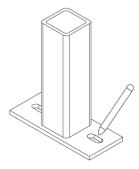


Place the rack in the desired location. Use a marker or pencil to outline the holes of the flange onto the base material.

2




Drill 3/8" diameter holes 3" deep into surface. Make sure the holes are at least 3" away from any cracks in the base material.

3

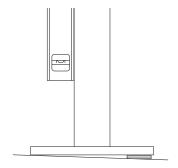

Place rack (and washers to level rack if necessary) over holes.

4

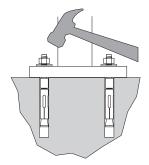

Thread nuts onto anchors, leaving approximately 1/4" of the anchor protruding, and tap into surface. Tighten nuts down to secure rack.



Installation Instructions — In Ground Mount

TOOLS NEEDED


Level
Cement mixing tub
Shovel
Trowel

Hole coring machine with 4" bit Access to water hose Materials to build brace (see "Install Tip" at bottom of page)


INSTALLING INTO EXISTING SIDEWALK

Core holes no less than 3" diameter (4" recommended) and 10" deep into sidewalk. Fill holes with Por-Rok or epoxy grout. Place rack into holes, making sure the rack is level. 33"-36" of the rack should remain above the surface. If the rack is less than 33" high, it will not support the bike adequately. Make sure the rack is level and held in place until the grout has set.


INSTALLING INTO A NEW SIDEWALK

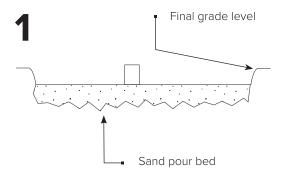

Place corrosion resistant sleeve (min. 3" inside diameter) in sand pour bed in exact location where rack will be installed. Make sure top of sleeve is at same level as desired finished concrete surface. Fill sleeve with sand to keep it in place and prevent it from filling with concrete.

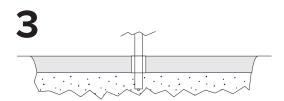

After appropriate cure time, dig out sand from sleeves and insert racks, making sure they are level and at the appropriate height. Pour in Por-Rok or epoxy grout and allow to set.

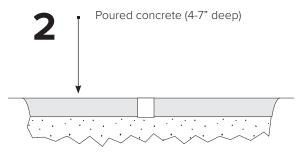

Pour concrete and allow to cure.






Rail Mounted Options


RAIL MOUNTED OPTIONS

Rail mounted Downtown Racks are standard foot mounted Downtown Racks attached with bolts to a rail as in the diagram at left. Rail mounted racks provide more flexibility than other mounting options while providing the same degree of security.

Rail mounted Downtown Racks can be left freestanding, or they can be anchored to the ground using several anchors. This option allows for easier snow removal and sweeping. Installation of Rail mounted Hoops is also much less expensive than embedding the racks into the ground.

* Note: Though racks may be painted, the rails will remain with only a galvanized finish

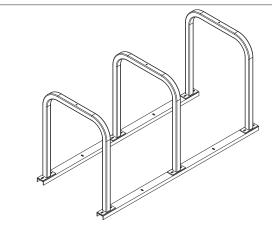

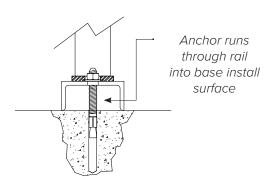

ADVANTAGES:

- Easier and inexpensive installation
- Can be left freestanding or anchored to the around
- Easier to remove for sweeping and snow removal

APPLICATIONS:

- Installation to pavers
- Asphalt Installations
- Ground, dirt, or mulch
- Situations where the rack needs to be moved occasionally

